

TreadClimber®
by **BOWFLEX®**

TC10



Manual en Español Latino Americano: <http://support.nautilus.com>

Owner's Manual

Welcome to TreadClimber® by Bowflex®!



You are about to experience a transformation that will not only shape your body but will also change your outlook on life. We thank you for investing your time and money in your TreadClimber® fitness machine. We are so confident in your purchase that we guarantee your results. If you don't see results in the first six weeks, you can get your money back (less shipping and handling) – guaranteed (see “100% Satisfaction Guarantee”).

Use this Owner's Manual as a guide to getting started on your TreadClimber® workouts and for tips to keep your machine well maintained.

Yours in Health,
The Bowflex® Family

Table of Contents

Important Safety Instructions	3	Leveling Your Machine	29
Safety Warning Labels and Serial Number.....	5	Maintenance	30
Specifications	8	Walking Belt Alignment.....	33
Features	9	Walking Belt Electrostatic Reduction.....	34
Operations	14	Troubleshooting.....	38
Before You Start	22	Body Weight Loss Guide	40
Moving Your Machine	28	100% Satisfaction Guarantee.....	51

To validate warranty support, keep the original proof of purchase and record the following information:

Serial Number _____ **Date of Purchase** _____

To register your product warranty, go to: www.bowflex.com/register

Or call 1 (800) 605-3369.

If you have questions or problems with your product, please call 1 (800) 605-3369.

Nautilus, Inc., (800) NAUTILUS / (800) 628-8458, www.NautilusInc.com - Customer Service: North America (800) 605-3369, tcinquiry@nautilus.com | outside U.S. +01-360-859-5180, technics@nautilus.com | Printed in China |
© 2011 Nautilus, Inc.



This icon means a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Before using this equipment, obey the following warnings:



Read and understand the complete Owner's Manual. Keep the Owner's Manual for future reference.

Read and understand all Warnings on this machine. If at any time the Warning stickers become loose, unreadable or dislodged, contact Nautilus® Customer Service for replacement stickers.

⚠ DANGER


To reduce the risk of electrical shock or unsupervised usage of the equipment, always unplug the power cord from the wall outlet and/or the machine and wait 5 minutes before cleaning, maintaining or repairing the machine. Place the power cord in a secure location.

⚠ WARNING

To decrease the risk of burns, electric shock, or injury to persons, read and understand the complete Owner's Manual. Failure to follow these guidelines can cause a serious or possibly fatal electrical shock or other serious injury.

- Children must not be let on or near to this machine. Moving parts and other features of the machine can be dangerous to children.
- Not intended for use by anyone under 14 years of age.
- Consult a physician before you start an exercise program. Stop exercising if you feel pain or tightness in your chest, become short of breath, or feel faint. Contact your doctor before you use the machine again. Use the values calculated or measured by the machine's computer for reference purposes only.
- Before each use, examine this machine for damage to power cord, power receptacle, loose parts or signs of wear. Do not use if found in this condition. Contact Nautilus® Customer Service for repair information.
- The machine should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Keep power cord away from heat source and hot surfaces.
- This machine must be connected to an appropriate, dedicated electrical circuit. Nothing else must be connected to the circuit.
- Always connect the power cord to a circuit capable of handling 10 amperes with no other loads applied.
- Connect this machine to a correctly grounded outlet; consult a licensed electrician for assistance.
- Do not operate where aerosol products are being used.
- Do not let liquids touch the electronic controller. If it does, the controller must be inspected and tested for safety by an approved technician before it can be used again.
- The electrical wiring for the residence in which the machine will be used must obey the applicable local and provincial requirements.
- Maximum user weight limit: 300 lbs. (136 kg). Do not use if you are over this weight.

Important Safety Instructions

- 
- This machine is for home use only.
 - Do not wear loose clothing or jewelry. This machine contains moving parts. Do not put fingers or other objects into moving parts of the exercise equipment.
 - Always wear rubber soled athletic shoes when you use this machine. Do not use the machine with bare feet or only wearing socks.
 - Set up and operate this machine on a solid, level, horizontal surface.
 - Use caution when you step on and off the machine. Use the supplied foot support platforms for stability before walking on the moving belt.
 - The normal design and operation of this machine allows for the treadles to move independently of each other when a person steps on, or exerts force or pressure, on the treadles. Be aware that treadle movement can occur when the machine is unplugged or the safety key removed. Always take care to insure that fingers do not get caught between the treadles, and to prevent injury never allow children or pets around the machine.
 - Do not operate this machine outdoors or in moist or wet locations.
 - Keep at least 19.5" (1/2 m) on each side of the machine and 79" (2 m) behind the machine clear. This is the recommended safe distance for access and passage around and emergency dismounts from the machine. Keep third parties out of this space when machine is in use.
 - Do not over exert yourself during exercise. Operate the machine in the manner described in this manual.
 - Perform all regular and periodic maintenance procedures recommended in the Owner's Manual.
 - Read, understand, and test the Emergency Stop Procedure before use.
 - Keep the walking belt clean and dry.
 - Do not drop or put objects into any opening of the machine.
 - This machine is designed for walking. Do not try to run on this machine.
 - Keep your hands on the support Handlebars and stay as near the front of the machine as is comfortable in order to stay in balance on the Treadles.
 - Keep your foot in the center of each Treadle, do not let your feet cross in front of your body as you increase the speed.
 - Use this machine only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Exercise on this machine requires coordination and balance. Be sure to anticipate that changes in speed, the angle of Walking Decks, and resistance level can occur during workouts, and be attentive in order to avoid loss of balance and possible injury.
 - This product contains magnets. Magnetic fields can interfere with the normal use of certain medical devices at a close range. Users may come into proximity of the magnets in the assembly, maintenance, and/or use of the product. Given the obvious importance of these devices, such as a pacemaker, it is important that you consult with your medical provider in connection with the use of this equipment. Please consult the "Safety Warning Labels and Serial Number" section to determine the location of the magnets on this product.

Safety Warning Labels and Serial Number

FAILURE TO OBEY THESE SAFEGUARDS CAN CAUSE SERIOUS INJURY OR HEALTH PROBLEMS.

⚠ WARNING

1. Keep children and pets away from this machine at all times.
2. When this machine is not in operation, remove the Safety Key and keep out of the reach of children.
3. Use Caution when you operate this equipment or serious injury can occur.
4. Prior to use, read and understand the Owners Manual, including all Warnings.
5. To prevent injury, stand on the Foot Platforms before you start the machine.
6. This machine is for Residential use only.
7. The Maximum user Weight for this machine is 300lbs. / 136kgs.
8. Replace any Warning label that becomes damaged, illegible or is removed.
9. Not intended for use by anyone under 14 years of age



* Safety Key

CAUTION ATTENTION

Unplug power cord before you move the machine.

Débranchez le cordon d'alimentation avant de déplacer la machine.

002-2268

* beside power inlet

⚠ WARNING

HAZARDOUS VOLTAGE.

Contact may cause electrical shock or burn.

Turn off and lock out power before servicing.



* under Rear Step

⚠ WARNING

-Moving parts can crush and cut.

-Keep guards in place.

-Lock out power before servicing.



* under Rear Step



* under Motor Cover

800209_A Serial Number
AAAAA V V V V V V V V W W 9999



⚠ WARNING

- Keep hands and feet away.

⚠ AVERTISSEMENT

- Gardez les mains et les pieds loin.

004-0930

* on inside of Treadles

CALIFORNIA 93120 PHASE 2
COMPLIANT FOR
FORMALDEHYDE

FABRICATOR

MM/YYYY

003-8597_C

Manufacture Date: WW/YY

		ASTM compliant	ETL 3101191

BOWFLEX

Nautilus, Inc.®

18225 NE Riverside Parkway, Portland, Or. 97230

www.nautilus.com

Phone: 1-800-NAUTILUS

Brand: BOWFLEX Model: TC10

Electrical Rating: 120VAC, 60Hz-10A

Accuracy Class: N/A

Usage Class: H / Consumer use only.

Maximum User Weight: 300lb (136kg)

Equipment Type: Fitness

Made in: China

Patent: www.nautilusinc.com/IP

8003693_A

Grounding Instructions

This product must be electrically grounded. If a malfunction occurs, correct grounding decreases the risk of electric shock. The power cord is equipped with an equipment-grounding conductor, and must be connected to an outlet that is properly installed and grounded.

⚠ DANGER The electrical wiring must comply with all applicable local and provincial standards and requirements. Incorrect connection of the equipment-grounding conductor can result in a risk of electric shock. Consult a licensed electrician if you are not sure that the machine is correctly grounded. Do not change the plug on the machine – if it does not fit the outlet, have a correct outlet installed by a licensed electrician.

If you connect the machine to an outlet with GFI (ground fault interrupt) or AFI (arc fault interrupt), machine operation can cause the circuit to trip.



If an extension cord or surge protector is used with this machine, make sure that it is a heavy duty model rated at 15A operation, and accepts an equipment-grounding conductor. Do not connect other appliances or devices to the extension cord or surge protector in combination with this machine.

Emergency Stop Procedure (Safety Key Port)

The TreadClimber® machine is equipped with a Safety Key that can prevent serious injury, as well as prevent children from playing with and/or being injured on the machine. If the Safety Key is not correctly inserted into the Safety Key Port, the belts will not operate.



Always attach the Safety Key Clip to your clothing during your workout.

When you use the machine, only remove the Safety Key in an emergency. When the key is removed while the machine is in operation, it will stop quickly, which could cause the loss of balance and possible injury.

For safe storage of the machine and to prevent unsupervised operation of the machine always remove the Safety Key and disconnect the power cord from the wall outlet and machine AC input. Place the power cord in a secure location.

The Console will display “ESStP” for a Safety Key fault. The TreadClimber® machine will pause a workout when the Safety Key is removed. Inspect the Safety Key and be sure it is connected to the Console correctly. Push the START button to resume the workout.



Specifications

Maximum User Weight: 300 lbs (136 kgs)

Power Requirements:

Operational Voltage: 120VAC 60 Hz


Operating Current: 10A max


Regulatory Approvals: c-ETL-us mark. Evaluated per UL 1647 Fourth Edition, January 2008 and CAN/CSA-C22.2. 68-92.



This product, its packaging, and components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is provided in accordance with California's Proposition 65. If you would like additional information, please refer to our web site at www.nautilus.com/prop65.



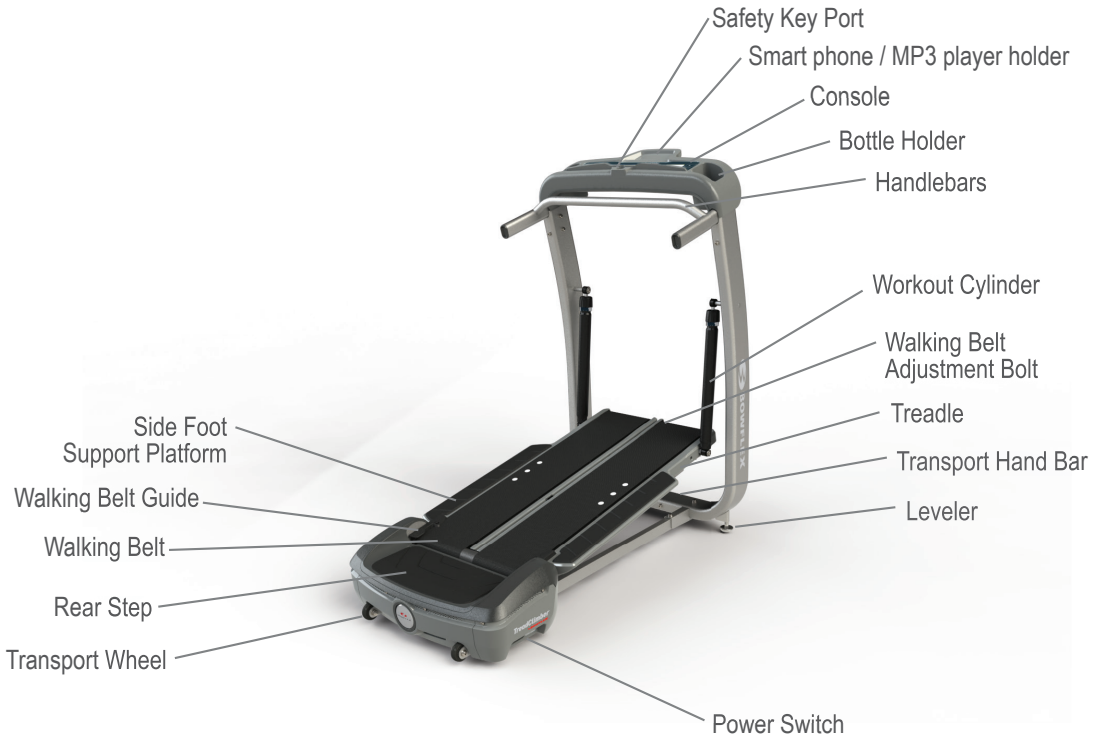

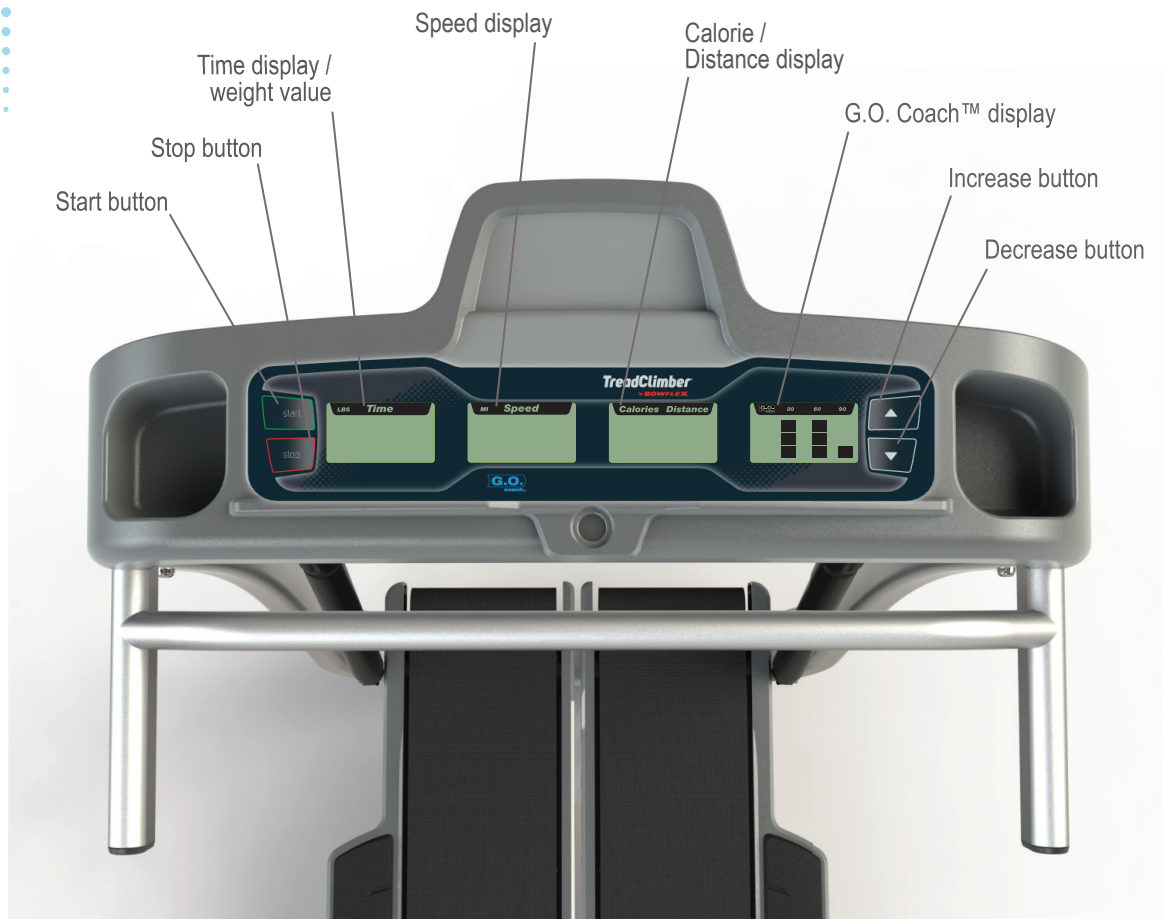

Console

START button

Push to power up the Console, start a workout, resume a paused workout, or select an option. Push and hold for 2 seconds to shift between the G.O. Coach™ workout mode and the Manual workout mode.

Note: During the Manual TreadClimber® workout mode, the G.O. Coach™ display will be blank.

STOP button

Push to pause a workout, exit the Console Service/ Setup mode, or end a paused workout.

Time display / weight value

Counts in minutes and seconds the total time of your workout (e.g. 15:42 minutes).

Shows the weight value for the G.O. Coach™ user and the Manual Workout mode in LBS (pounds) or KG (kilograms). The default value for Weight is 150 lbs.

Speed display

Shows your climbing rate in miles (MI) or kilometers (KM) per hour to one decimal (e.g. 3.4 MI). MI is the default setting.

Calorie / Distance display

Shows the Calorie or Distance values. The Calorie display counts your total calories.

Note: When you reach “9999”, the Calorie display will rollover to a value of “0”.

The display alternates between the Calorie and Distance values every 2 seconds. The Distance display shows your workout distance in miles (MI) or kilometers (KM). Miles is the default setting.

Note: When you workout a distance more than “99.99”, the display will rollover to “0.00”.

G.O. Coach™ display

The display shows the weekly progress toward the 90 minute, G.O. Coach™ goal for one user. The weekly goal consists of three columns of thirty minutes, each segment of a column is 3.3 minutes.


Note: This display is blank in Manual TreadClimber® workout mode.

Increase button

Push to increase the speed of the belts, increase a value for weight, or move through a list of options.

Decrease button


Push to lower the speed of the belts, decrease a value for weight, or move through a list of options. Push and hold

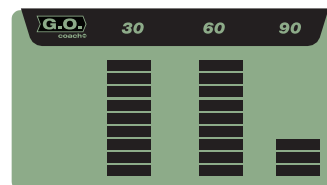

for 2 seconds to access the Weight value in Idle mode.

Hydraulic Setting Cylinders

Your TreadClimber® machine uses Hydraulic Cylinders to absorb your steps and cushion your joints, decreasing your overall fatigue and reducing muscle strain. The displacement of the Treadles is adjusted by the dials on the Hydraulic Cylinders. The MIN setting is the minimum amount of Treadle movement, the MAX is the maximum

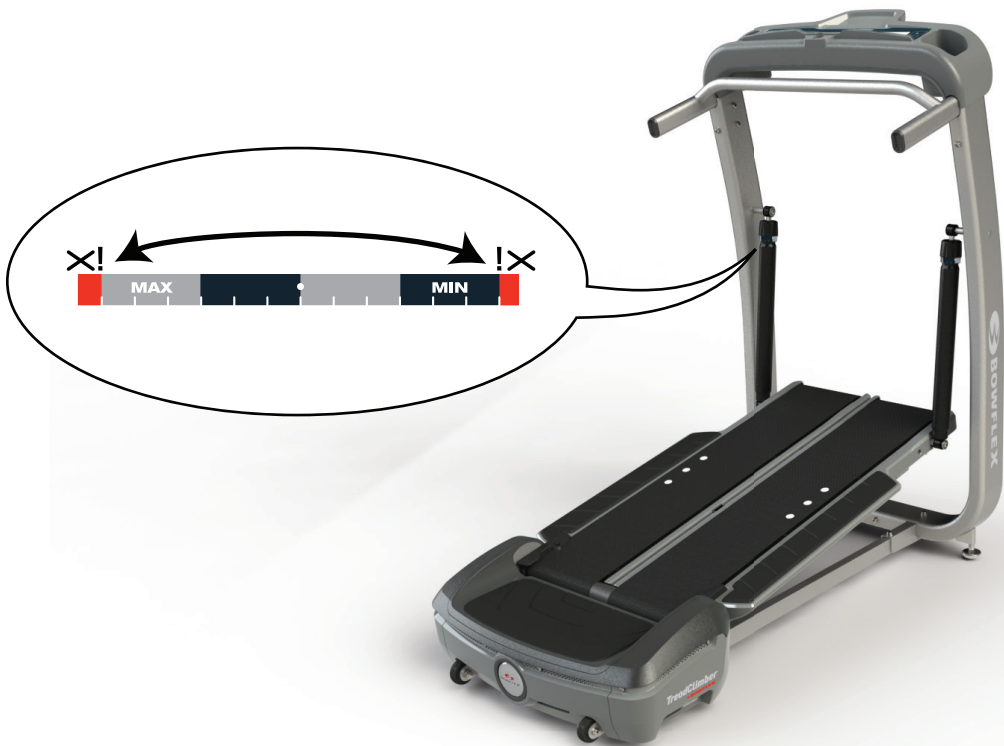

movement. The closer the dial is set to the MAX setting, the more the Treadle will travel. This results in a more intense workout.

Begin with each cylinder set to the central, white dot on the dial. If this setting allows too much Treadle travel, adjust the dial toward the MIN (clockwise) setting until you are comfortable with the amount of travel. If you find that the Treadles do not move enough to fully cushion your steps, adjust the dial setting toward the MAX (counter-clockwise) setting, allowing more Treadle movement. The Treadles should be set so they displace enough to absorb the impact of your stepping motion, approximately 3 inches. Although the settings dial can move continuously in either direction, it is recommended not to turn the dials through the red range.



Do not change the intensity settings of the Cylinders during a workout. Stop the workout and step off the machine before you adjust the resistance level.

Note: “Bottoming out” occurs when the Treadle travels through too great a range of motion. When this occurs, the Treadles hit against the base on the down step. To reduce Treadle travel, turn the setting dial toward MIN or increase the belt speed.

It may be helpful to note your dial setting for future reference when there are multiple users of the machine.





Fitness Basics

Frequency

To maintain good health, lose weight and improve your cardiovascular endurance, use the TreadClimber® fitness machine a minimum of 3 times per week, 30 minutes each day.

If you are new to exercise (or returning to a regular exercise program), and you are unable to comfortably complete 30 minutes of continuous exercise at one time, just do 5 – 10 minutes, and gradually increase your workout time until you can reach 30 minutes total.

If your schedule is busy, and you are unable to fit 30 minutes of continuous exercise into your day, try accumulating 30 minutes by doing multiple shorter workouts on the same day. For example, 15 minutes in the morning and 15 minutes in the evening.

For best results, combine your TreadClimber® fitness machine workouts with a strength training program using a Bowflex® home gym or Bowflex® SelectTech® dumbbells, and follow the Bowflex® Body Weight Loss Plan that comes with your machine.

Consistency

Busy work schedules, family obligations and daily chores can make it difficult to fit regular exercise into your life. Try these tips to increase your chances of success:

Schedule your workouts the same way you schedule meetings or appointments. Select specific days and times each week, and don't change your workout times unless it is absolutely necessary.

Make a commitment to a family member, friend or spouse, and encourage each other to stay on track each week. Leave messages with friendly reminders to be consistent, and keep each other accountable.

Make your workouts more interesting by alternating between steady state (single-speed) workouts and interval training (varied speed) workouts. The TreadClimber® fitness machine is even more fun when you add this kind of variety.

Apparel

It is important to wear appropriate, safe and comfortable footwear and clothing when using the TreadClimber® fitness machine, including:


- Rubber-soled athletic walking or running shoes.
- Exercise clothing that allows you to move freely, and keep comfortably cool.
- Athletic support that provides stability and comfort.

Warm-Up *

Before you use your TreadClimber® fitness machine, consider doing these dynamic warm-up stretches, which will help prepare your body for the workout:


Dynamic Knee Hug

Stand with the feet together. Bring one knee forward and up toward the chest. Place the hands around the shin and pull the knee into the chest. Release the stretch by putting the foot on the floor. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times. Repeat the stretch with the other leg.

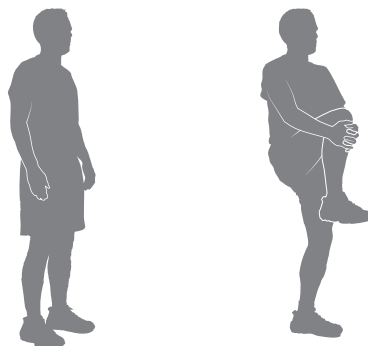


Dynamic Knee Bend

Stand with the feet together. Raise the heel of one foot toward the gluteals. Release the stretch by putting the foot on the floor. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times. Repeat the stretch with the other leg.

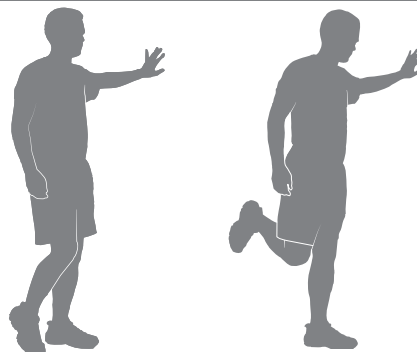


Dynamic Knee Kick

Stand tall and hold one leg up with the hands at hip height, keeping the knee bent. Hold onto a wall for balance with one hand, if necessary. Straighten the knee as far as comfortably possible. Release the stretch by bending the knee. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times. Repeat the stretch with the other leg.

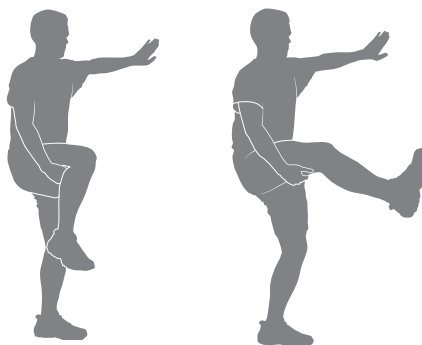


Dynamic Twist

Stand with the feet shoulder-width apart. Bend the elbows; hold the arms out to the sides. Twist the upper body to one side and then the other side as far as comfortably possible. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times

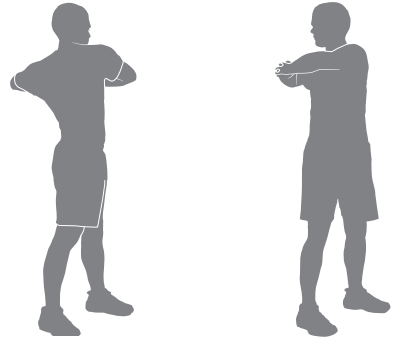


Dynamic Bent Knee Heel Press

Stand with one foot forward and one foot back, hip-width apart and feet facing forward. Bend both knees putting weight on the back heel. Release the stretch by returning to the start position. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times. Repeat the stretch with the other leg. Touch a wall or hold onto something for balance, if necessary.

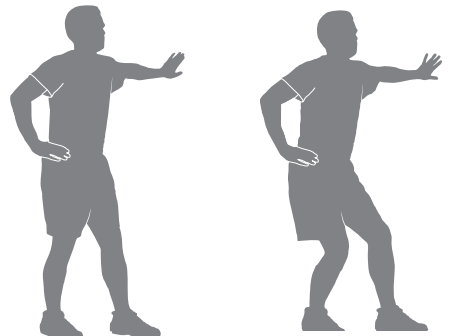

Dynamic Side Reach

Stand with the feet apart, the knees slightly bent and the arms at the sides of the body. Reach with one hand above the head and lean over to the opposite side. Release the stretch by returning to the start position. Then reach with the other hand to the opposite side. Use the other arm to support the body weight on the thigh, if necessary. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times.

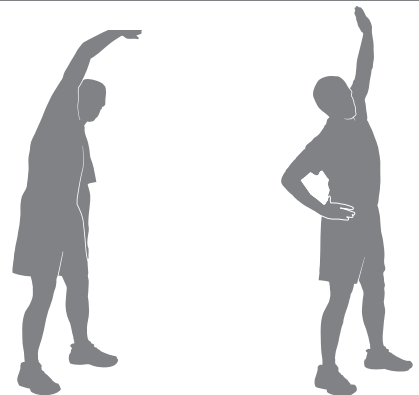

* Source: Jay Blahnik's Full-Body Flexibility, Second Edition, 2010. HumanKinetics.com.

Workouts

Follow these guidelines to ease yourself into a weekly exercise regimen. Use your judgment and/or the advice of your physician or health care professional to find the intensity and level of your workouts.



Consult a physician before you start an exercise program. Stop exercising if you feel pain or tightness in your chest, become short of breath, or feel faint. Contact your doctor before you use the machine again. Use the values calculated or measured by the machine's computer for reference purposes only.

Steady State and Interval Training are 2 types of workouts you can do on your TreadClimber® fitness machine:

Steady State workouts

A Steady State workout involves slowly increasing your workout speed to a challenging, but comfortable speed you can hold for most of your workout. For example, holding a 3.0 MPH walking pace for the entire workout, except during the warm-up and cool-down. Steady State workouts help you build exercise confidence, stamina and endurance, and are essential to a well-rounded cardiovascular training program.

Interval Training workouts

An Interval Training workout involves adjusting your speed faster and slower for specific lengths of time to raise and lower your breathing rate, heart rate and calorie burn. Here is a sample Interval Training workout:

- 7 minutes walking at a slow, easy, comfortable speed.
- 1 minute walking at a more challenging speed that is approximately 50% faster.
- 7 minutes walking at a slow, easy, comfortable speed.
- 1 minute walking at a more challenging speed that is approximately 2x faster.
- 7 minutes walking at a slow, easy, comfortable speed.
- 1 minute walking at a more challenging speed that is approximately 50% faster.
- 6 minutes walking at a slow, easy, comfortable speed.

Interval Training workouts provide variety, help minimize overuse injuries (that sometimes occur from doing only Steady State workouts), maximize calorie burn and improve fitness.

The TreadClimber® fitness machine is designed to cushion your joints and muscles, and both Steady State and Interval Training workouts should feel much more comfortable than walking or running outside on a hard surface or a treadmill.



Workout Schedule


Here is a beginner, intermediate and advanced sample workout schedule. With each of these sample workout schedules, do not move on to the next week until the current week feels easier and comfortable.

Beginner	Week 1	Week 2	Week 3	Week 4	Week 5
	Steady State	Steady State	Steady State	Interval Training	Interval Training
	Steady State	Steady State	Interval Training	Steady State	Steady State
	Steady State	Steady State	Steady State	Interval Training	Interval Training

Interme- diate	Week 1	Week 2	Week 3	Week 4	Week 5
	Steady State	Steady State	Interval Training	Steady State	Interval Training
	Steady State	Interval Training	Steady State	Interval Training	Steady State
	Steady State	Steady State	Interval Training	Steady State	Interval Training

Advanced	Week 1	Week 2	Week 3	Week 4	Week 5
	Steady State	Interval Training	Interval Training	Interval Training	Interval Training
	Interval Training	Steady State	Steady State	Steady State	Interval Training
	Steady State	Interval Training	Interval Training	Interval Training	Interval Training

 Use this log to track your workouts and progress. Tracking your workouts helps you stay motivated and achieve your goals.


[illegible]

Cool-Down *

When you are done using your TreadClimber® fitness machine, consider doing these relaxing stretches, which will help your body recover from the workout and make you more flexible:


Lying Leg Raise

Lie on the floor face up with the legs slightly bent. Lift one leg up toward the ceiling, keeping the knee straight. Place the hands (or a strap) around the thigh and move the leg closer to the head. Hold the stretch for 10 to 30 seconds. Repeat the stretch on the other leg. Keep the head on the floor and do not round the spine.

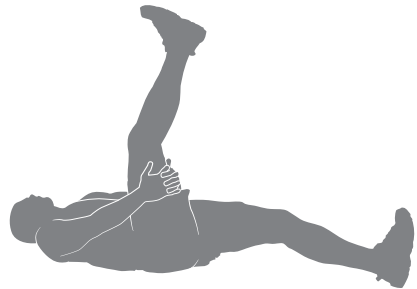


Side Lying Knee Bend

Lie on the floor on one side of the body and rest the head on the lower arm. Bend the top knee and hold the ankle with the same-side hand, then pull the heel toward the gluteals. Hold the stretch for 10 to 30 seconds. Lie on the other side and repeat the stretch with the other leg. Remember to hold the knees close together.

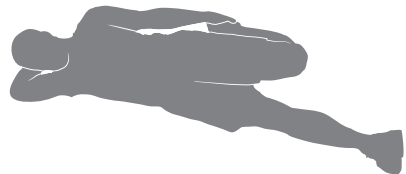

Lying Figure Four

Lie on the floor face up with the legs bent. Place one foot across the thigh of the opposite leg in the figure four position. Reach for the leg on the floor and pull it toward the chest. Hold the stretch for 10 to 30 seconds. Repeat the stretch with the other leg. Keep the head on the floor.

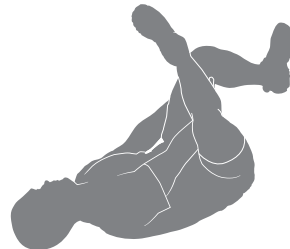

* Source: Jay Blahnik's Full-Body Flexibility, Second Edition, 2010. HumanKinetics.com.



Seated Twist

Sit on the floor and extend the legs straight out in front of the body with the knees slightly bent. Place one hand on the floor behind the body and the other hand across the thigh. Twist the upper body as far as comfortably possible to one side. Hold the stretch for 10 to 30 seconds. Repeat the stretch on the other side.




Seated Figure Four

Sit on the floor and extend one leg straight out in front of the body. Place the foot of the other leg across the thigh in the figure four position. Move the chest toward the legs, pivoting at the hip. Hold the stretch for 10 to 30 seconds. Repeat on the other leg. Use the arms to support the back.



Dynamic Heel Drop

Place the ball of one foot on the edge of a step or staircase. Place the other foot slightly in front. Lower the heel of the back foot as far as comfortably possible, keeping the knee straight. Release the stretch by lifting the heel as high as comfortably possible. Each repetition of the sequence should take 1 to 3 seconds. Repeat as a continuous, controlled, fluid sequence 10 or 20 times. Repeat the stretch with the other leg.

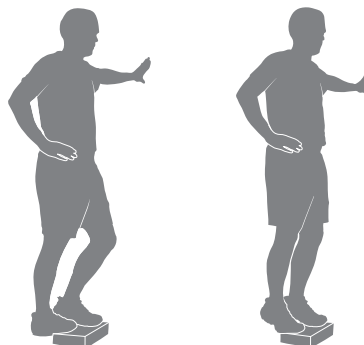

Before You Start



Consult a physician before you start an exercise program. Stop exercising if you feel pain or tightness in your chest, become short of breath, or feel faint. Contact your doctor before you use the machine again. Use the values calculated or measured by the machine's computer for reference purposes only.

1. Place the TreadClimber® fitness machine in your workout area.



Place the machine on a clean, hard, level surface, free from unwanted material or other objects that may hamper your ability to move freely. A rubber mat can be used below the machine to prevent the release of static electricity and protect your flooring.

The machine can be moved by one or more persons. Make sure that your own physical strength is capable of safely moving the machine.

2. Adjust the intensity settings on the Hydraulic Cylinders.

Note: Initially, the settings on each cylinder should match. Begin with each cylinder set to the central, white dot on the dial.

3. Connect the power cord to the machine and into a grounded AC Wall Outlet.

Note: The TreadClimber® fitness machine is designed to plug directly into a properly wired and grounded three prong 120V outlet. If an extension cord must be used, be sure it is a heavy duty model, rated for 15A.



Put the power cord alongside the machine, out of your way when you dismount the machine. Avoid stepping on the power cord and plug.

4. Examine below the Treadles for any objects. Be sure it is clear below the machine.
5. Switch on the power. Power is now supplied to the machine.
6. Straddle the belts and stand on the Side Foot Support Platforms. Put the Safety Key into the Safety Keyhole and clip the Safety Key cord to your clothing.
 - The Safety Key must be correctly put into the Safety Keyhole for the Belt Motor to engage.
 - Always attach the Safety Key Clip to your clothing during workouts.
 - If there is an emergency, pull out the Safety Key to shut off the power to the Belt Motor. This will quickly stop the belts (brace yourself- this is an abrupt stop).



7. Select your workout mode (G.O. Coach™ Workout Mode or Manual TreadClimber® Mode).

Note: If you are not the main user of this machine, be sure the G.O. Coach™ display is blank. If the G.O. Coach™ display is visible, push and hold the START button for two seconds until it is blank.

8. Push the START button, and begin your workout when the belts are up to speed.



Keep your hands on the support Handbars and stay as near the front of the machine as is comfortable in order to stay in balance on the Treadles.

Keep your foot in the center of each Treadle, do not let your feet cross in front of your body as you increase the speed.

When you are experienced and comfortable with the action of the machine, you may wish to allow your arms to swing freely in a natural walking motion. This workout will activate your core muscles. It should only be done by those comfortable with not holding on to the Handlebars.

Power Up / Idle Mode

The Console will enter Power Up mode when initially plugged into a power source and any button is pushed.



The belts will only move after a 3 second, audible beep countdown.

Note: The Console will start in the G.O.Coach™ Workout mode.

Shut Off (Sleep Mode)


If the Console does not receive any input for five minutes, it will automatically shut off.

Note: The Console does not have an On/Off switch.


Push the START button to start (wake up) the Console.

G.O. Coach™ Workout Mode

The G.O. Coach™ Workout mode provides one user a weekly, goal oriented workout— 30 minutes a workout (each column), 3 workouts a week for a total of 90 minutes (all 3 columns). As you workout, the active column will build over thirty minutes. When fully built, the next column will activate for your next workout.

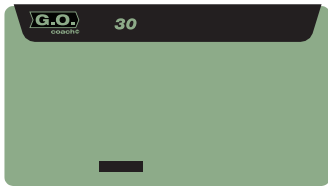

Workout 1.

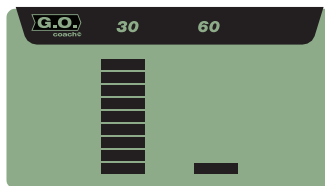

Workout 2.



Workout 3

When you reach the weekly goal of all three columns, the display will clear with an audible sound, and a blank series of columns will begin.

90 minutes is the encouraged, weekly goal. The Console records your workout time value, so you can stop your G.O. Coach™ Workout and continue it later. If you plan to workout more or less than 90 minutes over the week, it might be helpful to track your workouts or establish a weekly workout routine.

Note: For accurate goal tracking, only the main user of the machine should workout in this mode. The G.O. Coach™ Console will save the time of each workout and apply it toward the goal.

The Console will start in G.O. Coach™ workout mode. The G.O. Coach™ display is active when in this mode.



Manual TreadClimber® Mode

The Manual TreadClimber® Mode allows the machine to be used without affecting the G.O. Coach™ weekly goal. Manual Mode lets other users workout on the TreadClimber® machine besides the main user. No result information is tracked from the manual mode.

At the end of a Manual Mode workout, the Console will display your results, erase them, and be ready for the next manual workout.

Note: The G.O.Coach™ display is blank when in this mode. If the G.O. Coach™ display is visible, push and hold the START button for two seconds until the display is blank.



To begin a manual TreadClimber® workout:

1. Check and be sure the Console is in the Manual TreadClimber® Mode (G.O. Coach™ display is blank).
2. If the display is blank, push START.
3. Your Manual TreadClimber® Workout will begin after the three second, audible beep countdown.

Note: Be sure to read the “Before You Start” section of your manual.

Program Your Weight

The weight values for the G.O. Coach™ user and the Manual Workout mode can both be programmed into the Console. With a more precise value for your weight, the Console can supply a more accurate value for calories.



1. Select your preferred workout mode (G.O. Coach™ mode or Manual TreadClimber® mode). To shift between modes, push and hold the START button for 2 seconds.
2. Push and hold the Decrease button for 2 seconds. The Console will show the default weight of 150 pounds or the last weight entered for this mode.
3. Adjust the value with the Increase and Decrease buttons, and push START. An audible beep will confirm your input. This value will be remembered until adjusted.

Results

When a workout ends, the Console will show the workout results. Your results are shown in sequence (time, average speed, calories, and distance) three times.

Note: If the Console does not receive any further input after 5 minutes, the Console will shut off.

Pausing or Stopping a Workout

1. With a firm hold on the Handlebars, step off of the belts and onto the Side Foot Support Platforms on either side of the Treadles.
2. Push STOP to pause the workout. The belts will slow to a complete stop.

Note: If a paused workout is not restarted in 5 minutes, the machine will shut down and clear all workout values.

3. To restart your workout, push the START button. To end your workout, push STOP again. The Console will display your results.



To prevent unsupervised operation of the machine always remove the Safety Key and disconnect the power cord from the wall outlet and machine AC input. Place the power cord in a secure location.

Console Service / Setup Mode

The Console has a Service / Setup Mode. Some options in the Service / Setup Mode can be adjusted to your preferences, but most are helpful for service of the machine. To access the Service / Setup Mode, hold down the Increase and Decrease buttons for 2 seconds.

Order	Display	Option	Description
1	Unit	Units	Select your preferred unit of measurement; "Lb" = English Imperial, "Si" = metric
2	brt	Brightness	Control the contrast level of the Console; "8" = maximum intensity, "1" = minimum
3	LOG	Error Log *	Displays error codes, starting with the most recent
4	Con	Console Version *	Displays the software version
5	dr	Drive Version *	Displays the drive version
6	HrS	Device Usage	Displays total number of hours and minutes used
7	diSt	Device Mileage	Displays total mileage
8	HiSt	Motor Current History *	Displays the average motor current for the current maintenance interval. Push the Decrease button to view the averages of previous intervals.
9	Hd	Hardware Type *	Displays the hardware type
10	Curr	Motor Current *	Displays the current of the motor
11	CoAS	Coast Time *	A test to see how long until the belts stop.
12	LooP	Loop Back *	A test to see if the Console is receiving data.
13	CSn	Console Serial Number	Displays the serial number of the Console across all the displays
14	dSn	Drive Serial Number *	Displays the serial number of the Motor Control Board across all the displays
15	dES	Drive Error Statistics *	Displays the latest hard error statistics for the Motor Control Board. Push the Increase and Decrease buttons to view all error statistics.

* for Service Technicians

Use the Increase and Decrease buttons to cycle through the Options. To change the value of an Option, push START and use the Increase and Decrease buttons to select the desired value. Push START to assign the new value to the Option.

Push STOP to exit an Option and the Service / Setup Mode.



Moving Your Machine

The TreadClimber® fitness machine weighs approximately 158 lbs (71.8 kg) when fully assembled and requires caution when being moved. Use the Transport Hand Bar found under the front of the machine to move it. To get access to the Transport Hand Bar, turn the Levelers until you have sufficient clearance between the machine and floor.

Use the transport wheels to roll your fitness machine to the new location. Lower your machine slowly into its new location without injury to your head or fingers.



Do not use the uprights, handlebars, treadles, or the Console to lift or move the machine. Injury to you or damage to the machine can occur.

The machine may be moved by one or more persons depending on their physical abilities and capacities. Make sure that you and others are all physically fit and able to move the machine safely.

Place the machine on a clean, hard, level surface, free from unwanted material or other objects that may hamper your ability to move freely. A rubber mat should be used below the machine to prevent the release of static electricity and protect your flooring.

For safe storage of the machine and to prevent unsupervised operation of the machine always remove the Safety Key and disconnect the power cord from the wall outlet and the AC input. Place the power cord in a secure location.



Machine Mat

The Bowflex® TreadClimber® Machine Mat is an optional accessory that helps keep your workout area clear and adds a layer of protection to your floor. The rubber machine mat provides a non-slip, rubber surface which limits static discharge and reduces the possibility of display or running errors. If possible, put your Bowflex® TreadClimber® Machine Mat in your selected workout area before you begin assembly.

To order the optional machine mat, go to: www.bowflex.com, or call 1 (800) 605-3369.

Leveling Your Machine

Levelers are found on the front of the TreadClimber® machine. Make sure the TreadClimber® machine is level and stable before you exercise. To adjust:

1. Loosen the upper locking nut.
2. Turn the leveler to adjust the height.
3. Tighten the upper locking nut to lock the leveler.



Do not adjust the levelers to such a height that they detach or unscrew from the machine. Injury to you or damage to the machine can occur.



Read all maintenance instructions fully before you start any repair work. In some conditions, an assistant is required to do the necessary tasks.



Equipment must be regularly examined for damage and repairs. The owner is responsible to make sure that regular maintenance is done. Worn or damaged components must be repaired or replaced immediately. Only manufacturer supplied components can be used to maintain and repair the equipment.

⚠ DANGER To reduce the risk of electrical shock or unsupervised usage of the equipment, always unplug the power cord from the wall outlet and/or the machine and wait 5 minutes before cleaning, maintaining or repairing the machine. Place the power cord in a secure location.

Daily: Before each use, inspect for loose, broken, damaged, or worn parts. Do not use the machine if any of these conditions exist. Use a dry cloth to wipe off any perspiration after each use.

Weekly: Check for smooth roller operation. Clean the machine to remove dust, dirt, or grime. Clean the top of the belt with a slightly damp, soapy cloth and wipe carefully and thoroughly with a dry cloth. Do not let any liquid get below the belts or into the Base Frame.

Monthly: Make sure all bolts and screws are tight. Tighten if necessary.

NOTICE: Do not clean with a petroleum based solvent or an automotive cleaner. Be sure to keep the Console free of moisture.



Walking Belt and Deck Lubrication

The TreadClimber® machine is equipped with a low maintenance deck and belt system. Belt friction can affect the function and life of the machine. Your TreadClimber® fitness machine came with a starter supply of lubrication for the belts.

Lubrication Schedule

User Level	Total Workout Hours per Week	When to Lubricate
Light	less than 3 hours	every 3 months
Moderate	3 to 5 hours	every 2 months
Heavy	5 or more hours	every month

We recommend that you use one of the following:

- Lube-N-Walk® Treadmill Lubrication Kit (available from www.bowflex.com or your local specialty fitness dealer)
- 100% pure silicone, available at most hardware and auto parts stores.

As you use your fitness machine, the Console will show “LUB” at set times. This is only a reminder and should be added to your inspection schedule. Only apply lubricant as necessary. Push the START button to accept the reminder.


For the best results lubricate the Treadles periodically with a silicone lubricant, using the following instructions:

1. Unplug the machine fully from the wall outlet, and remove the power cord from the machine. Place the power cord in a secure location.
2. Carefully lift each belt and apply silicone lubricant in the center of the Treadle deck along the entire reachable length of the deck. Apply 0.5 to 1.5 oz. of the lubricant on the deck underneath each belt.

NOTICE: Always use a 100% pure silicone lubricant. Do not use a degreaser like WD-40® or a petroleum based product as this could seriously impact performance.

Note: The Walking Belts may need to be loosened to allow for access during lubrication. Consult the “Adjusting the Walking Belts” procedure if necessary.

3. Connect the power cord back into the machine and then into the wall outlet.
4. Stay to one side of your machine.

- 
5. Switch on your machine and start the belts at the slowest speed. Let the belts operate for approximately 15 seconds.
 6. Switch off your machine.
 7. Take care to clean up any excess lubricant from the Treadles. We also recommend a periodic inspection of the Treadle surfaces below the belts. If the decks appear worn, contact a TreadClimber® Representative (refer to the Contacts section of this manual).



To decrease the possibility of slipping, be sure the Treadle area is free from grease or oil. Clean off any excess oil from the machine surfaces.

Walking Belt Alignment

The walking belts need to be adjusted if they are out of center enough to cause a rubbing or scraping sound.

Adjustments can be made at the Front Roller of each Treadle.

Adjusting the Walking Belts – While operating the machine, notice where the belts run on each Treadle. The Walking Belt Adjustment Bolts are on the front end of each Roller. If the belt is tracking too far to the right, use a properly sized Hex Key to turn the right adjustment bolt clockwise on that belt in full turn increments. If the belt tracks too far to the left, do the same thing on the left adjustment bolt.


Note: Do not turn the bolts counterclockwise when you adjust the belt alignment.

Belt Tension Adjustment – Check the belt tension only when the machine is unplugged. From the belt's midpoint, a correctly tensioned belt should only have an inch of give. To check, pull the belt upward at its midpoint and measure the distance to the deck. If the distance is more than an inch, the belt is loose. To tighten, turn both Walking Belt Adjustment Bolts clockwise one-half a turn and check tension again. Repeat this step if necessary.

Note: Bolts are turned counterclockwise equally to decrease belt tension.

Walking Belt Electrostatic Reduction

Your TreadClimber® machine can develop a static charge causing the movement of the walking belts. Follow

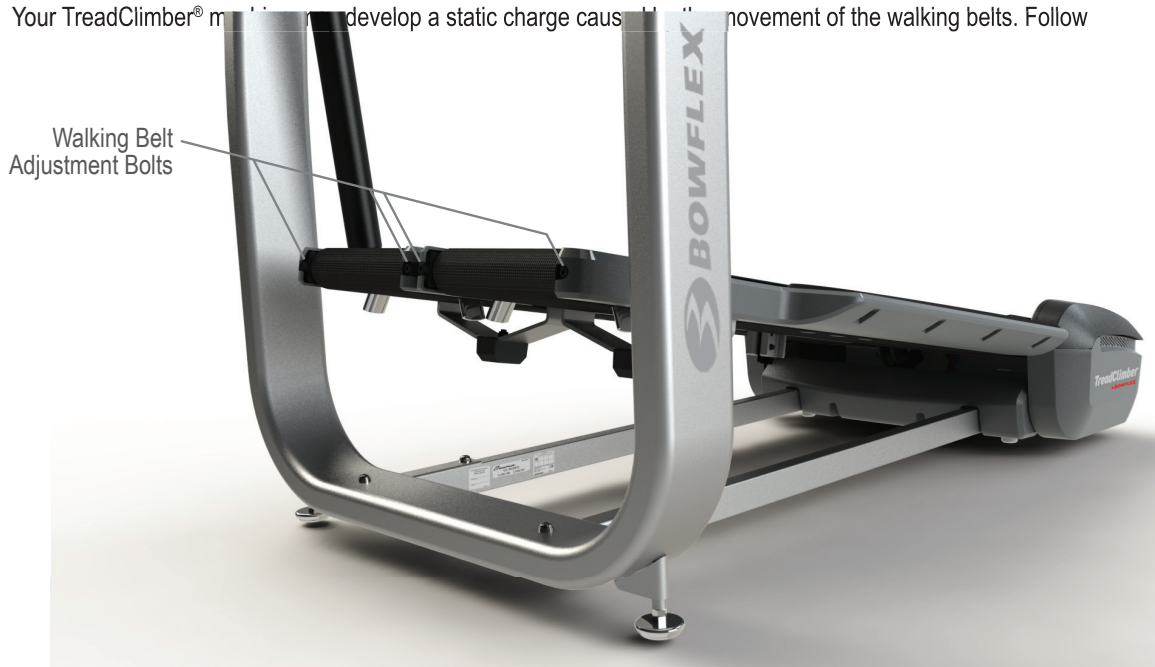

this procedure to apply an anti-static spray to them to reduce the static electric charges.



Wait a minimum of 60 minutes after the last workout before you apply the anti-static spray, to let hot electrical components cool to room temperature.

1. Unplug the machine from the wall.

⚠ DANGER To reduce the risk of electrical shock or unsupervised usage of the equipment, always unplug the power cord from the wall outlet and/or the machine and wait 5 minutes before cleaning, maintaining or repairing the machine. Place the power cord in a secure location.

2. Using a 5 mm hex wrench, loosen the tension adjustment bolts for the walking belts to let them slide easily. Turn the bolts counterclockwise to decrease the tension.

Note: Be sure to record how many turns it takes to loosen the bolts to assist with reassembly.

3. Carefully apply the anti-static spray to lightly cover the top surface of the walking belts along the front of the machine, farthest from the motor (green highlighted area).

NOTICE: Hold the spray dispenser approximately 6" (13 cm) above the walking belt and point the spray toward the front of the machine, away from the motor. Apply the spray only on the belts, not on the deck or mechanism. If spray goes off the belts, wipe the excess spray off the other parts of the machine.

Note: Be sure to obey the manufacturer safety instructions for the anti-static product.

4. Using your foot, manually advance the walking belts toward the back of the machine, exposing the next unsprayed section.
5. Do steps 3 and 4 again until all sections of the belts are lightly coated with anti-static spray.
6. Wait until the belts dry fully (approximately 2-4 hours).

7. Using a 5 mm hex wrench, tighten the tension adjustment bolts for the walking belts. Turn the bolts clockwise to



increase the tension.

8. Plug in the machine and turn on the power.


9. Inspect the walking belt alignment and tension before using the machine. Refer to the walking belt alignment and belt tension adjustment procedures.

Note: Repeat the procedure to apply anti-static spray if static electric discharge occurs again. The machine will accumulate more static electric charge when the surrounding air is drier. Be sure to obey the manufacturer safety instructions for the anti-static product.




Maintenance Parts


Console / Handlebar Assembly

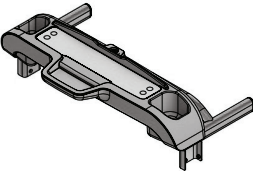

Left Upright

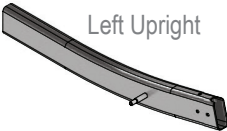

Treadle Assembly

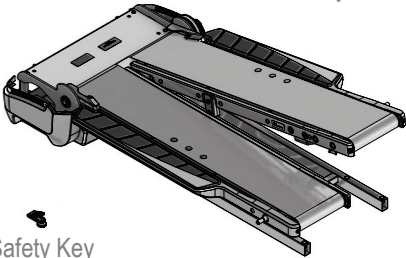


Power Cord



Cylinders



Right Upright

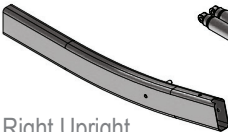

Safety Key




Rear Step





Rear Cover



Base Upright

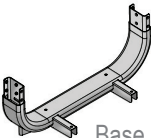

Maintenance Parts (Treadle Assembly)

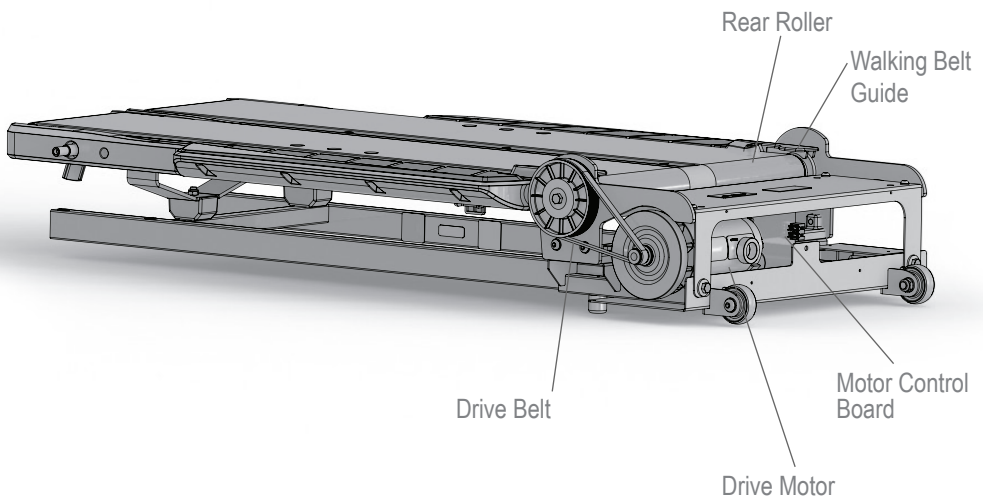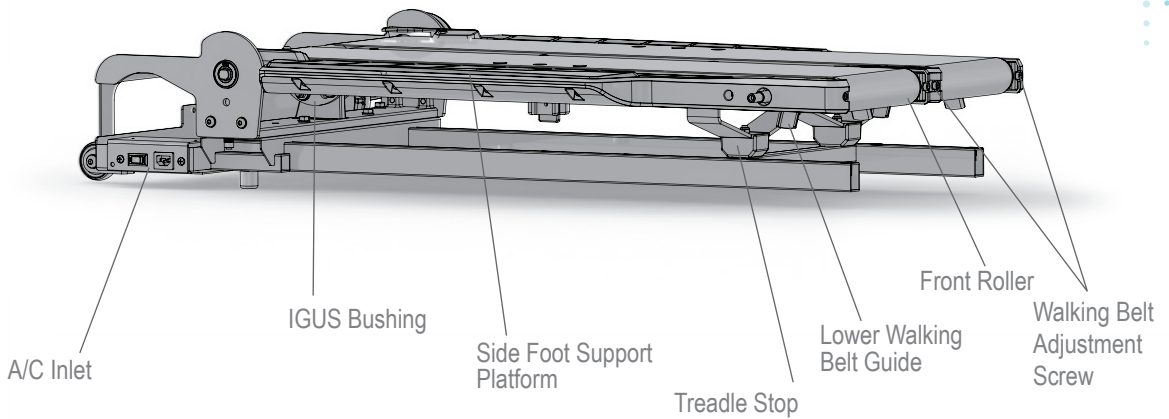

Condition/Problem	Things to Check	Solution
Unit will not power up/turn on/start	Outlet	Make sure outlet is functioning correctly. Verify this by plugging another device (ex: lamp) into the outlet. If outlet is connected to a light switch, check to make sure it is on. If outlet is not functioning find a working outlet.
	Power cord not plugged in	Make sure the power cord is firmly secured to A/C inlet on the unit and firmly inserted into a non-GFI wall socket.
	Power switch turned off	Make sure the power switch at the rear of the unit is in the "ON" position. Switch will light up red to indicate power is present.
	Safety key not plugged in	Plug Safety Key into Console (See Safety Key (Emergency Stop Procedures) within Features section).
Speed displayed is not accurate	Display set to wrong unit of measure. (English/ Metric)	Change display units.
Walking belt misalignment	Rear belt guides	Belts should ride on top of triangular black belt guides at rear of treadles.
	Tracking adjustment	Belts are not required to be perfectly centered and are typically farther out in the rear than they are in the front. This may vary depending on user's stride. If belt is tracking to one side far enough to cause rubbing of belt, consult the "Adjusting the Walking Belts" procedure.
Speed dependent grinding or scraping noise	Belt alignment	Check walking belt alignment. Belt contact with metal guides under Treadle can make a loud grinding sound. If belts are misaligned, adjust walking belt.
	Rollers or motor	Contact Customer Care for further assistance.
Hesitation or belt slipping when walking on unit	Walking belt tension	Adjust walking belt tension by following the "Adjusting the Walking Belt" procedure.
Knocking noises when unit is operating	Igus bushing	If knocking sound seems to be coming directly from the rear roller, check Igus (yellow "hat" shaped) bushings and replace if cracked.
	Hydraulic cylinder bolts	Check and tighten both upper and lower bolts that connect the hydraulic cylinders to the unit.



Condition/Problem	Things to Check	Solution
Belts stop turning while in use	Safety key	Plug Safety Key into Console (See Safety Key (Emergency Stop Procedures) in Features section).
	Motor overload	Unit may be overloaded and drawing too much current, causing unit to shut power down to protect motor. Consult belt lubrication schedule to determine if belts need lubrication, check walking belt tension, and restart unit.
	Outlet	Outlet may not have enough power available for the machine due to other devices on same circuit. Remove any devices from power circuit and restart machine.
Console displays “C”, “S”, or “H” with a number	Console	Cycle power off and on to clear the error. If issue recurs be sure to note the display code and contact Customer Service for further assistance.
Console displays “LUbE” code	Belt lubrication	Consult lubrication schedule and apply if necessary. Push START button.

Introduction and Overview

Welcome to the Bowflex® Body Weight Loss Guide. This guide is designed to be used with your Bowflex® equipment and will help you:

- Lose weight and get lean
- Improve your health and wellness
- Increase your energy and vitality

By focusing on the main three elements of the Bowflex® Body Weight Loss Guide- quality, balance, and consistency- you'll be able to reach and maintain your weight loss and fitness goals for the next six weeks and beyond.

- **Quality** – The emphasis of this plan is on eating more whole foods and getting the most nutrients from your calories as possible. Making the majority of your diet from foods that have a single ingredient (for example fruits, vegetables, fish, lean protein, eggs, beans, nuts, and whole grains) provides the vitamins, minerals, fiber, protein, and healthy fats your body needs.
- **Balance** – Each of the meals and snacks in this guide have a source of fiber or smart carbohydrate, protein, and healthy fat to keep your energy levels consistent throughout the day to fuel your workouts. By having this balance you'll feel fuller longer, which is critical to weight loss success.
- **Consistency** – Getting about the same number of calories each day is important for your metabolism and your mindset. If you overdo it one day, don't try to make up for it the next day by not eating or cutting your calories drastically. Get right back on track by following this guide!

Results & Expectations

Results will vary depending on your age, starting weight, and exercise level but on average you can expect to lose 1-3 lbs per week and experience increased energy levels.

5 Tips for Long-Term Success

1. **Keep a food log** including hunger levels and water intake. Free online food logs and mobile apps are available at www.myfitnesspal.com and www.loseit.com
2. **Weigh and/or take measurements weekly** – no more and no less. Weighing weekly rather than daily or every other day is best. You'll track your progress and keep yourself in check without getting discouraged if the scale doesn't move for a few days. And remember, weight is just a number and it's influenced by muscle gain as well as fat loss. Feeling how your clothes fit can often be a better indicator of progress as your body adapts to exercise and nutrition changes.
3. **Measure portions** – To avoid portion creep, use measuring cups and spoons for grains (rice, pasta, cereal), beans, nuts, oils, and dairy. Use the Portion Sizes Guide for other foods.
4. **Plan ahead** – Make a meal plan for the week or log your food a day in advance. Planning sets you up for success, especially for social events and eating out.
5. **Practice your desired long-term habits** – It's easy to justify poor eating choices when you're only focused on the short term. Focus on the long term satisfaction of a slimmer, healthier you rather than the temporary gratification you'll get from splurging.



How to Use this Guide

- **Eat breakfast within 90 minutes of waking up and balance your meals and snacks throughout the day**
 - Don't go longer than 5-6 hours without eating
 - If you're not used to eating breakfast, start out small with a piece of fruit and have something else 1-2 hours later. Your body adapts to not eating breakfast, but as soon as you start eating early in the day and cutting back on dinner portions you'll notice your hunger will increase. This is a good sign your metabolism is working!
- **Mix and match meal options**
 - Select 1 option from the appropriate meal plan (male or female) for breakfast, lunch, and dinner, paying close attention to portion sizes
 - Select 1-2 snack options per day
 - You have the option to substitute one snack for one treat under 150 calories
 - Use the meal plan, sample options, and grocery list to create your own meals for more variety
 - You can swap out any type of protein, vegetables or smart carbs for the suggested meal options. For example:
 - Turkey for tuna
 - Any fish or seafood for chicken
 - Cooked vegetables instead of salad
- **Eat your calories**
 - Cut out high calorie beverages like soda, juices, coffee drinks, and alcohol
 - Stick with water, unsweetened tea, and coffee. Aim for a minimum of 64oz (1.9 liters) of water per day to stay well hydrated
- **If you're still hungry after or in between meals:**
 - Have a glass of water and wait 15-20 minutes. Many times we mistake thirst (or even boredom!) for hunger. Wait out the initial urge to eat and sometimes it will pass.
 - If you're still hungry after waiting 15-20 minutes have a snack or mini-meal with fruit, vegetables, and protein.

If your goal is muscle gain or strength:

- Use the same meal plan but increase portion sizes in the same ratios to increase the total number of calories you eat every day. For example, increase portion sizes of protein and smart carbs at meals by 50%. Adding a snack is another option to meet your body's increased calorie needs in order to gain muscle and strength.
- Focus on post-workout nutrition by having one of your snacks within 30 minutes after you complete your workout. Make sure to have a combination of carbohydrates such as fruit with protein (yogurt, milk, or protein powder) to promote muscle growth and recovery. Chocolate milk is also a great option.



Meal Plan Overview

The female meal plan provides about 1400 calories, and the male plan provides about 1600 calories, of high quality nutrition to not only help you lose weight and feel great but get the most out of your calories. The vitamins, minerals, and antioxidants from eating mostly whole foods help support optimal health. These calorie levels will result in healthy weight loss for the majority of people. Keep in mind that everyone's metabolism is very different depending on age, height, weight, activity level, and genetics. Pay close attention to your weight, hunger levels, and energy and adjust your calories if needed.

Follow these guidelines if you're over 55:

- If you're over 55, you need fewer calories because your metabolism slows as you age. Stick with three meals with one optional snack per day.

Follow these guidelines if you're under 25:

- If you're under 25 you may need more calories. Add another snack if you feel low on energy or are extremely hungry.

Breakfast

Breakfast includes a smart carb, fruit, and a source of protein, which will also have fat. With a balance of carbohydrates and fiber from the smart carb and fruit combined with protein and fat, you'll energize your day and help control hunger levels throughout the day.

Snacks

Each snack is a balance of carbohydrates and protein to keep your blood sugar more consistent, which means you won't experience hunger and energy level spikes and drops.


This happens when you have a high carb-only snack like chips, candy, soda, crackers, or pretzels.

Lunch and Dinner


Lunch combines filling fiber from vegetables and smart carbs with a lean, or low-fat, protein. The healthy fat can come either from the protein added during cooking (nuts on a salad) or as a dressing or sauce (such as oil and vinegar salad dressing).

Here's an overview of what an ideal day looks like:
(See Portion Size Guide for proper serving sizes)


Breakfast

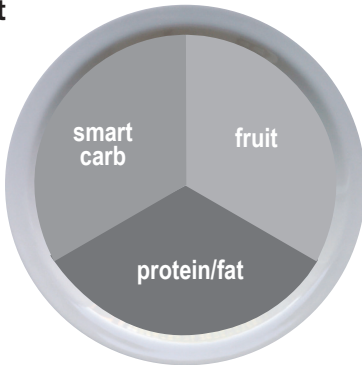


Snack #1

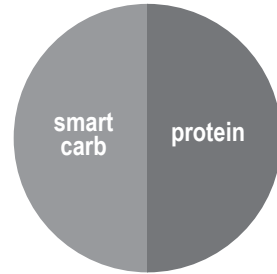


Lunch

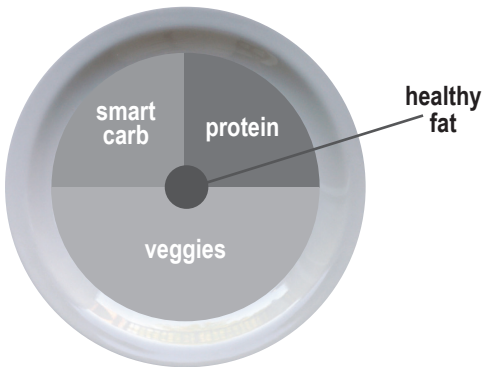

Snack #2

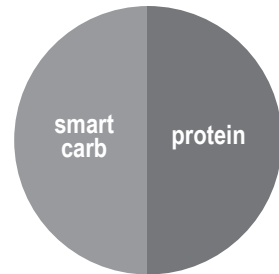

Dinner

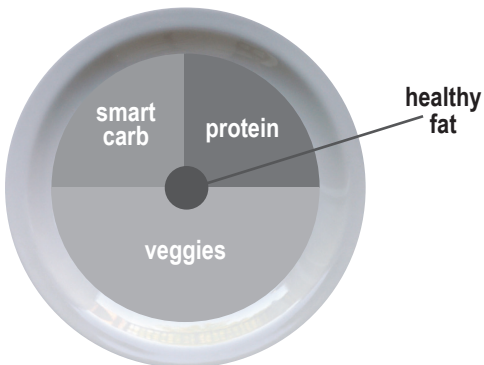

Bowflex® Body Weight Loss Guide

Breakfast Options	Fruit	Smart Carb	Protein/Fat
Fruit and Nut Oatmeal Cook plain oats in water. Top with fruit, nuts, milk, cinnamon, and honey.	Berries or banana	Plain oats (Regular or quick-cook)	Nuts and milk
Egg Muffin Cook egg/s. Toast bread and top with 1 slice of cheese, 1 slice of ham, and tomato.	Tomato	English muffin or sandwich thin	Egg, ham, and cheese
Yogurt Power Parfait Top yogurt with fruit. Sprinkle with 1 serving of nuts, 2-3 tbsp wheat germ, or ground flaxseed, 1 tbsp oats, and cinnamon.	Chopped fruit of your choice	Oats, wheat germ, and ground flaxseed	Plain non-fat Greek yogurt and nuts
On the Go PB & Apple Sandwich Toast bread. Spread on peanut butter, thin slices of ½ an apple, and 1 teaspoon of honey.	Sliced apple	Sandwich thin, bread, or bagel thin	Peanut butter

Lunch & Dinner Options	Lean Protein	Smart Carb	Veggies
Pork Loin, Sweet Potato & Green Beans	Grilled or baked pork loin	Baked sweet potato	Green beans
Chicken Stir Fry Flavor with 2 tablespoon teriyaki sauce	Chicken breast or boneless skinless thigh	Brown or wild rice	Mixed stir fry vegetables (fresh or frozen)
Steak Tacos with Side Salad (3 for males, 2 for females) Top with salsa, cilantro, and sprinkle of shredded cheese	Flank or sirloin steak	Corn tortillas	Salad
Whole Wheat Pasta with Shrimp or Cannellini Beans & Marinara Sauce	Shrimp (frozen or fresh) or cannellini beans	Whole wheat pasta	Steamed broccoli
Bunless Burgers with Oven Fries, Corn, & Salad Grill burgers. Bake sliced potatoes on sprayed cookie sheet for 25-30 minutes @ 425°F.	93% lean ground beef or turkey	Oven baked fries	Corn on the cob + side salad
Tuna & Avocado Wrap with Vegetable Soup Use 3oz of tuna (1 can). Top with lettuce, tomato, avocado, and mustard.	Tuna	High-fiber wrap	Vegetable soup (homemade or low-sodium canned)



Snack Options

Smart Carb	Protein
1 medium apple	10-15 almonds
Baby carrots	2 tbsp hummus
1 serving of crackers*	1 string cheese
Energy or protein bar with <200 calories*	

*See www.Bowflex.com/Resources for brand recommendations

Optional Treats

You have the choice of replacing Snack #2 with a 100-150 calorie treat. You can have an optional treat every day but for optimal health it is recommended to limit small splurges to 3-4 times per week. Use the approach that works best for you. Here are a few examples:

- ½ cup lowfat ice cream
- 1 small bag of baked potato chips
- 4oz of wine or 12oz light beer
- 3 cups of air-popped or light popcorn

Sample 3 Day Plan

Based on each of the meal options listed above, a typical 3 day plan could look like this:

	Day 1	Day 2	Day 3
Breakfast	Egg muffin	Power yogurt parfait	Fruit + nut oatmeal
Snack 1	Apple with almonds	Nut Thins® + string cheese	Baby carrots and hummus
Lunch	Tuna & avocado wrap with soup	Leftovers from dinner- day 1	Leftovers from dinner- day 2
Optional Snack 2 or Treat	½ cup ice cream bar	Energy bar	100 calorie bag of light popcorn
Dinner	Shrimp pasta	Chicken stir fry	Bunless burgers

Portion Size Guide

Each of the items listed are for one serving

MALE	FEMALE
PROTEIN	
2 eggs	1 egg
5oz chicken, fish, lean meat, or tofu	3oz chicken, fish, or lean meat
2/3 cup beans or lentils*	1/2 cup beans or lentils*
1 cup greek yogurt*	1/2 cup greek yogurt*
1.5oz cheese*	1.5oz cheese*
HEALTHY FAT	
2 Tblspn peanut or nut butter*	1 tblspn peanut or nut butter*
2 tspn olive, flax, or walnut oil	1 tspn olive, flax or walnut oil
1/4 cup of nuts	1/8 cup or 2 tablespoons of nuts (approx. 15 almonds)
1/3 medium avocado	1/4 medium avocado
SMART CARB	
1 cup cooked grains (1/2 cup raw): oats, brown rice, quinoa, pasta	1/2 cup cooked (1/4 cup raw) grains
1 medium sweet or regular potato	1/2 medium sweet potato or regular potato
2 corn tortillas	2 corn tortillas
1 slice of bread (or 2 light slices equaling 120 calories or less)	1 slice of bread (or 2 light slices equaling 120 calories or less)
1 english muffin, sandwich thin, or high-fiber wrap	1 english muffin, sandwich thin, or high-fiber wrap
FRUIT	
1 medium apple, orange, or pear	
1 small banana (length of your hand)	
1 cup berries or chopped fruit	
1/4 cup dried fruit (fresh or frozen is optimal)	
Vegetables* You can have unlimited vegetables except for peas and corn; stick with 1/2 cup serving	
2 cups spinach or lettuce = 2 cupped hands	
1 cup raw vegetables	
1/2 cup cooked vegetables	
6oz low sodium vegetable juice	



 
1 cup = baseball



1/2 cup = lightbulb



1 oz or 2 tbsp
= golf ball



1/4 cup nuts
= Altoids tin



3 oz chicken or meat
= deck of cards

OPTIONAL TREATS

1/2 cup lowfat ice cream
1 small bag of baked potato chips
1oz dark chocolate
4oz of wine or 12oz light beer
3 cups air-popped or light popcorn

* some foods are a combination of protein and carbs or protein and fat



1 medium potato
= computer mouse



1 medium piece of
fruit = tennis ball



1 -1/2 oz cheese
= 3 dice

Grocery List

BREAD & GRAINS

100% whole wheat bread
Sprouted grain breads
Light or whole wheat english muffins
Sandwich or bagel thins
Corn or low-carb whole wheat tortillas
High-fiber wraps
Plain oats: 1 minute or old fashioned
Whole grains: brown rice, bulgar, barley, quinoa, couscous

Tips: Look for 100% whole wheat as the first ingredient. Look for 4g of fiber per slice or 5g per 2 slices of light or diet bread. Aim for bread with less than 100 calories per slice.

DAIRY & DAIRY ALTERNATIVES		CRACKERS, SNACKS & ENERGY BARS	
Plain non-fat greek yogurt Kefir (yogurt like drink) Organic low-fat milk Enriched almond or soy milk Cheese: feta, parmesan, mozzarella, light havarti, provolone, swiss, string cheese, or single serving packages		Any unsalted nuts or seeds Air-popped or light popcorn Edamame in the pod	Energy bars Crackers Hummus
MEAT, FISH, POULTRY & PROTEIN		Tips: Limit crackers, pretzels, and chips to 2-3 servings per week. Always pair with protein such as hummus, cheese, or nuts. Look for energy bars with less than 200 calories and 20g of sugar and at least 3g of protein and 3g of fiber. Look for crackers with less than 130 calories and 4g or less of fat per serving.	
Wild game Salmon, halibut, tuna, tilapia, shrimp, catfish, scallops, or crab Pork loin, pork chops, or pork roast Chicken or turkey breast or thighs (no skin) Eggs and 100% egg whites Lean beef: sirloin, chuck, round, tenderloin, 93% lean (organic and grass fed is best) Canned salmon or tuna (in water) Nitrate-free, reduced sodium ham, turkey, chicken, or roast beef lunch-meat Any type of bean, dry or canned low-sodium varieties Tofu and tempeh		FATS & OILS	
Tips: Look for “Choice” or “Select” cuts of meat rather than “Prime”. Prime cuts are fattier. Limit intake of highly processed meat and imitation meat products like sausage, bacon, pepperoni, and hot dogs to once a week or less.		Avocado Olive, grapeseed, walnut, sesame, or flaxseed oil Butter/spreads: look for products free of trans fats and partially hydrogenated oils on the ingredient list. Tips: Light olive oil refers to the flavor, not the calorie content. Always measure oil and butter. Even if a fat is considered healthy, it’s still very high in calories and portions need to be controlled.	
FROZEN FOODS		DRESSINGS, CONDIMENTS & SAUCES	
All vegetables without sauce All fruit Grains and grain medleys		Vinegars: rice, wine, balsamic All fresh or dried herbs and spices Mustard Salsa and chili sauce Marinara sauce with no high-fructose corn syrup Lemon and lime juice Bottled minced garlic and ginger Low-sodium soy sauce Tips: Look for products free of MSG, added colors, and high fructose corn syrup. Look for sauces under 50 calories per serving. Avoid cream based sauces and dressings like ranch, bleu cheese, and alfredo.	

All fruits and vegetables, fresh and frozen, are great choices. Since every meal has one or both, your shopping cart should reflect this.



Keep It Going

Tips for continued weight loss and maintaining changes

- **Keep weighing yourself weekly**, even after you've reached your goal weight
- **Continue keeping a food log**. If you have your meal plan well-established, log your food every other week to keep yourself on track. Don't feel like you have to do it every day.
- **Prepare for plateaus**. The scale might not budge for a few weeks or even months after some initial weight loss. This is normal and to be expected. It's the body's natural process for adjusting to your new lower weight. Stay focused on your long-term goal, celebrate your successes and changes, and mix up your workouts to help overcome the plateau.
- **Calorie adjustments for maintaining weight loss**. Once you've reached your goal weight, you can increase your calories 100-200 per day as long as your activity level stays the same
- **Treat yourself**. Have a non-food reward for each goal you hit such as a massage, a new outfit, or an outing with friends and family
- **Use the resources below** to find new recipes, get expert advice, and support to stay motivated

Resources

Downloadable Resources from Bowflex® Website (www.Bowflex.com/Resources)

- Grocery Shopping List for Fridge (Blank Form)
- 7 Day Meal Planning Form
- Additional Dinner Options
- Pre and Post Workout Fueling Guide

Questions & Support

- Ask questions, post suggestions, and connect with our online Bowflex® Dietitian on the Bowflex® Facebook page

Recipes

- www.wholeliving.com
- www.eatingwell.com
- www.whfoods.org
- www.livebetteramerica.org

Online food logs

- www.myfitnesspal.com
- www.loseit.com





We want you to know that your TreadClimber® machine is a superior product. Your satisfaction is guaranteed. If, for any reason, you are not 100% satisfied with your TreadClimber® machine, please follow the instructions below to return your merchandise and receive a refund of the purchase price, less shipping and handling.

This TreadClimber® Satisfaction Guarantee applies only to merchandise purchased by consumers directly from Nautilus, Inc. This guarantee does not apply to sales made by dealers or distributors.

1. Call a TreadClimber® Representative at 1-800-605-3369 for a Return Authorization Number (RMA). An RMA will be granted if:
 - a. The TreadClimber® exercise machine was purchased directly from Nautilus, Inc.
 - b. The request to return the product is within 6 weeks of the delivery date of your merchandise.
2. If an RMA is granted, the following instructions will prevent delays in the processing of your refund.
 - a. The merchandise must be returned to the address given to you at the time of the Return Authorization Call.
 - b. All returned merchandise must be properly packaged in good condition, preferably in the original boxes.
 - c. The exterior of the boxes should be marked clearly with:
 - Return Authorization Number
 - Your Name
 - Your Address
 - Your Phone Number
 - d. Additionally, a piece of paper with your name, address and phone number or copies of your original invoice should be placed in each box of merchandise.
 - e. **Your RMA number is time sensitive.** Your shipment must be post marked within two weeks from the date the TreadClimber® Representative issued the Return Authorization Number.

Note: You are responsible for return shipping and for any damage or loss to merchandise that occur during return shipment. Nautilus recommends that you obtain tracking numbers and insure your shipment.

Unauthorized Returns

Nautilus, Inc. defines an unauthorized return as any merchandise returned to our facilities without a valid and current Return Merchandise Authorization (RMA) number issued by Nautilus. Failure to properly mark packages with a valid RMA number, or allowing an RMA number to expire, will cause Nautilus, Inc. to consider a return unauthorized. Any merchandise returned without a RMA number will not be subject to a refund or credit and Nautilus will discard the product. The customer assumes all shipping and handling charges for any unauthorized return.

TreadClimber[®]

by **BOWFLEX**[®]

Nautilus[®]

Bowflex[®]

Schwinn[®]

Universal[®]